 
 




## HOW TO CHECK MY TYRE PRESSURE

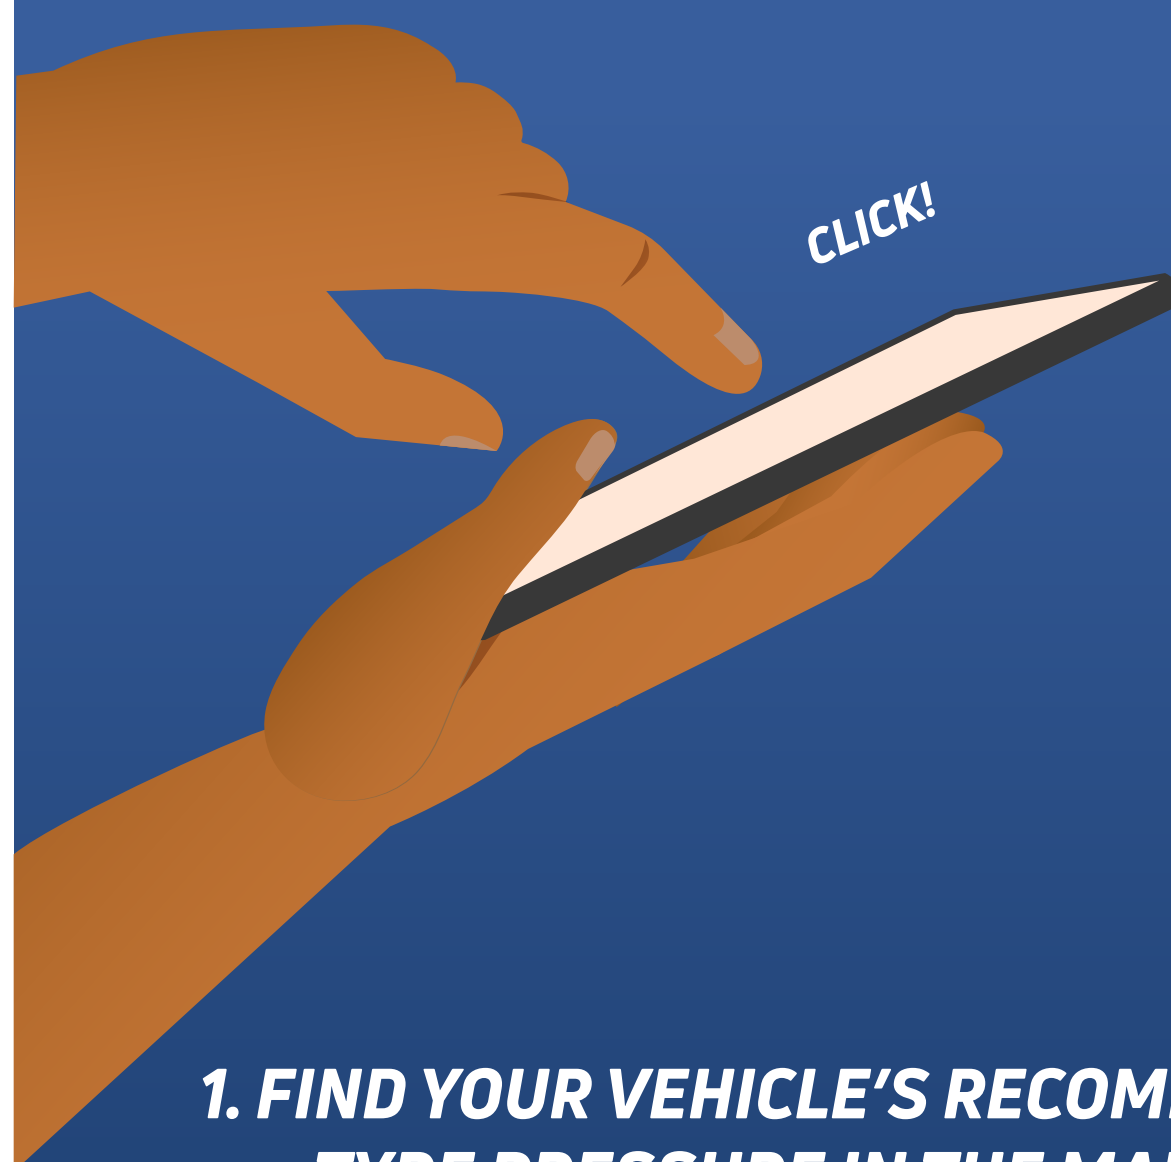


1. FIND YOUR VEHICLE'S RECOMMENDED TYRE PRESSURE IN THE MANUAL OR USE OUR ONLINE TOOL.

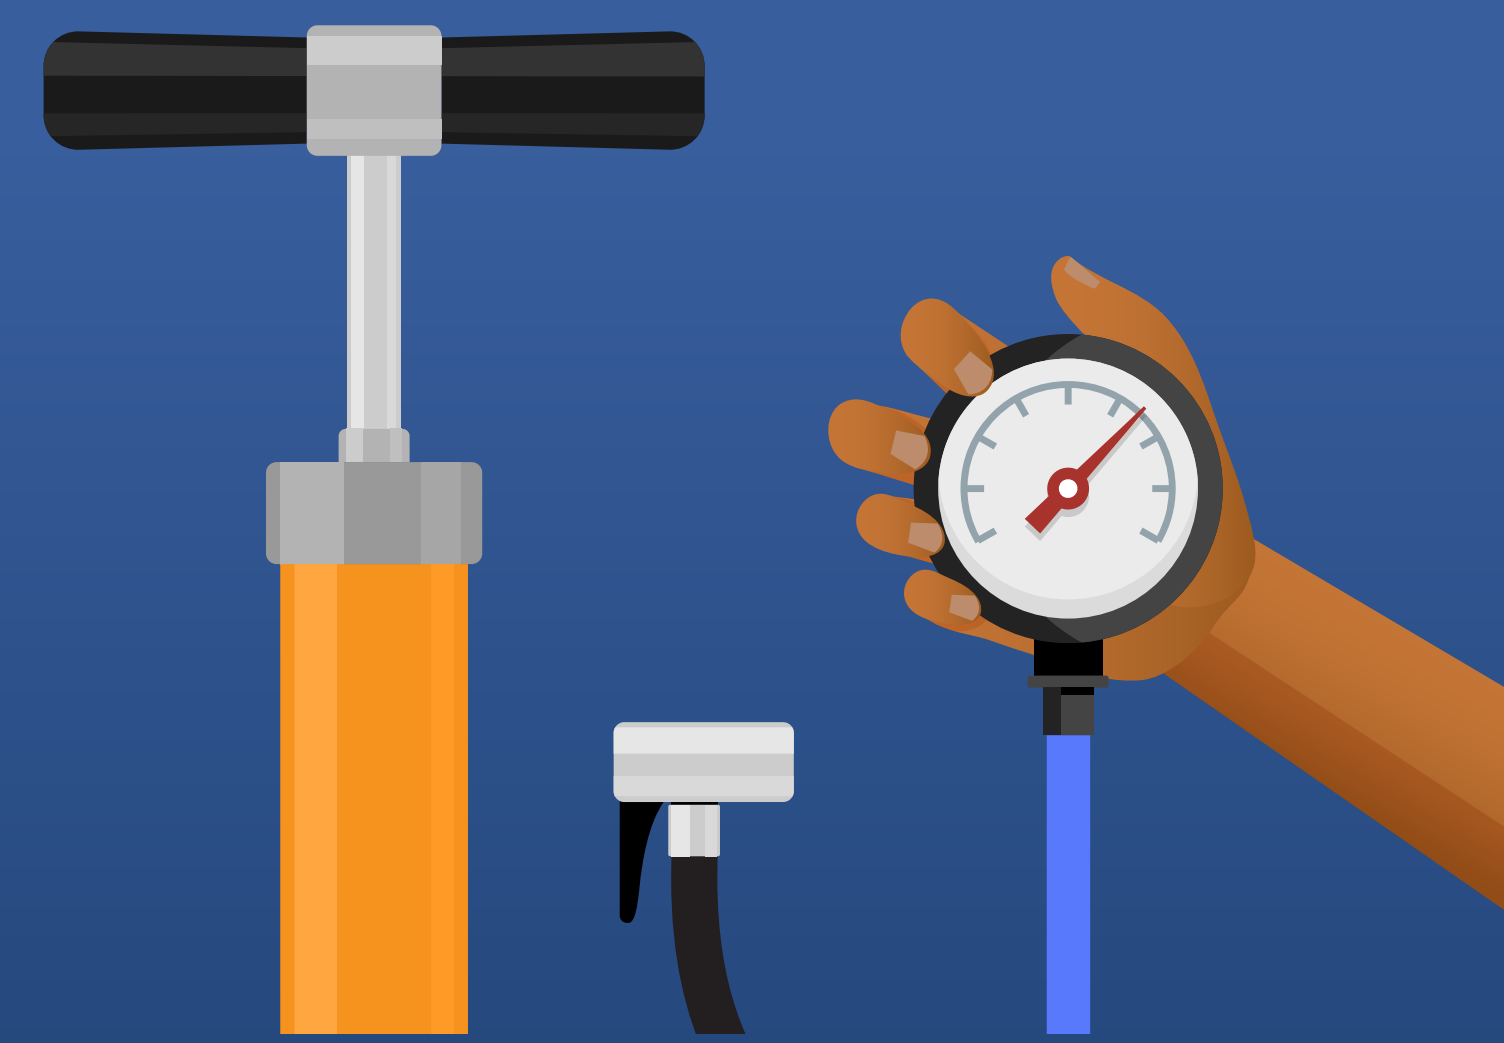

2. GATHER A TYRE PRESSURE GAUGE AND, IF NEEDED, AN AIR PUMP.



4. REMOVE THE VALVE CAP FROM THE TYRE'S VALVE STEM.

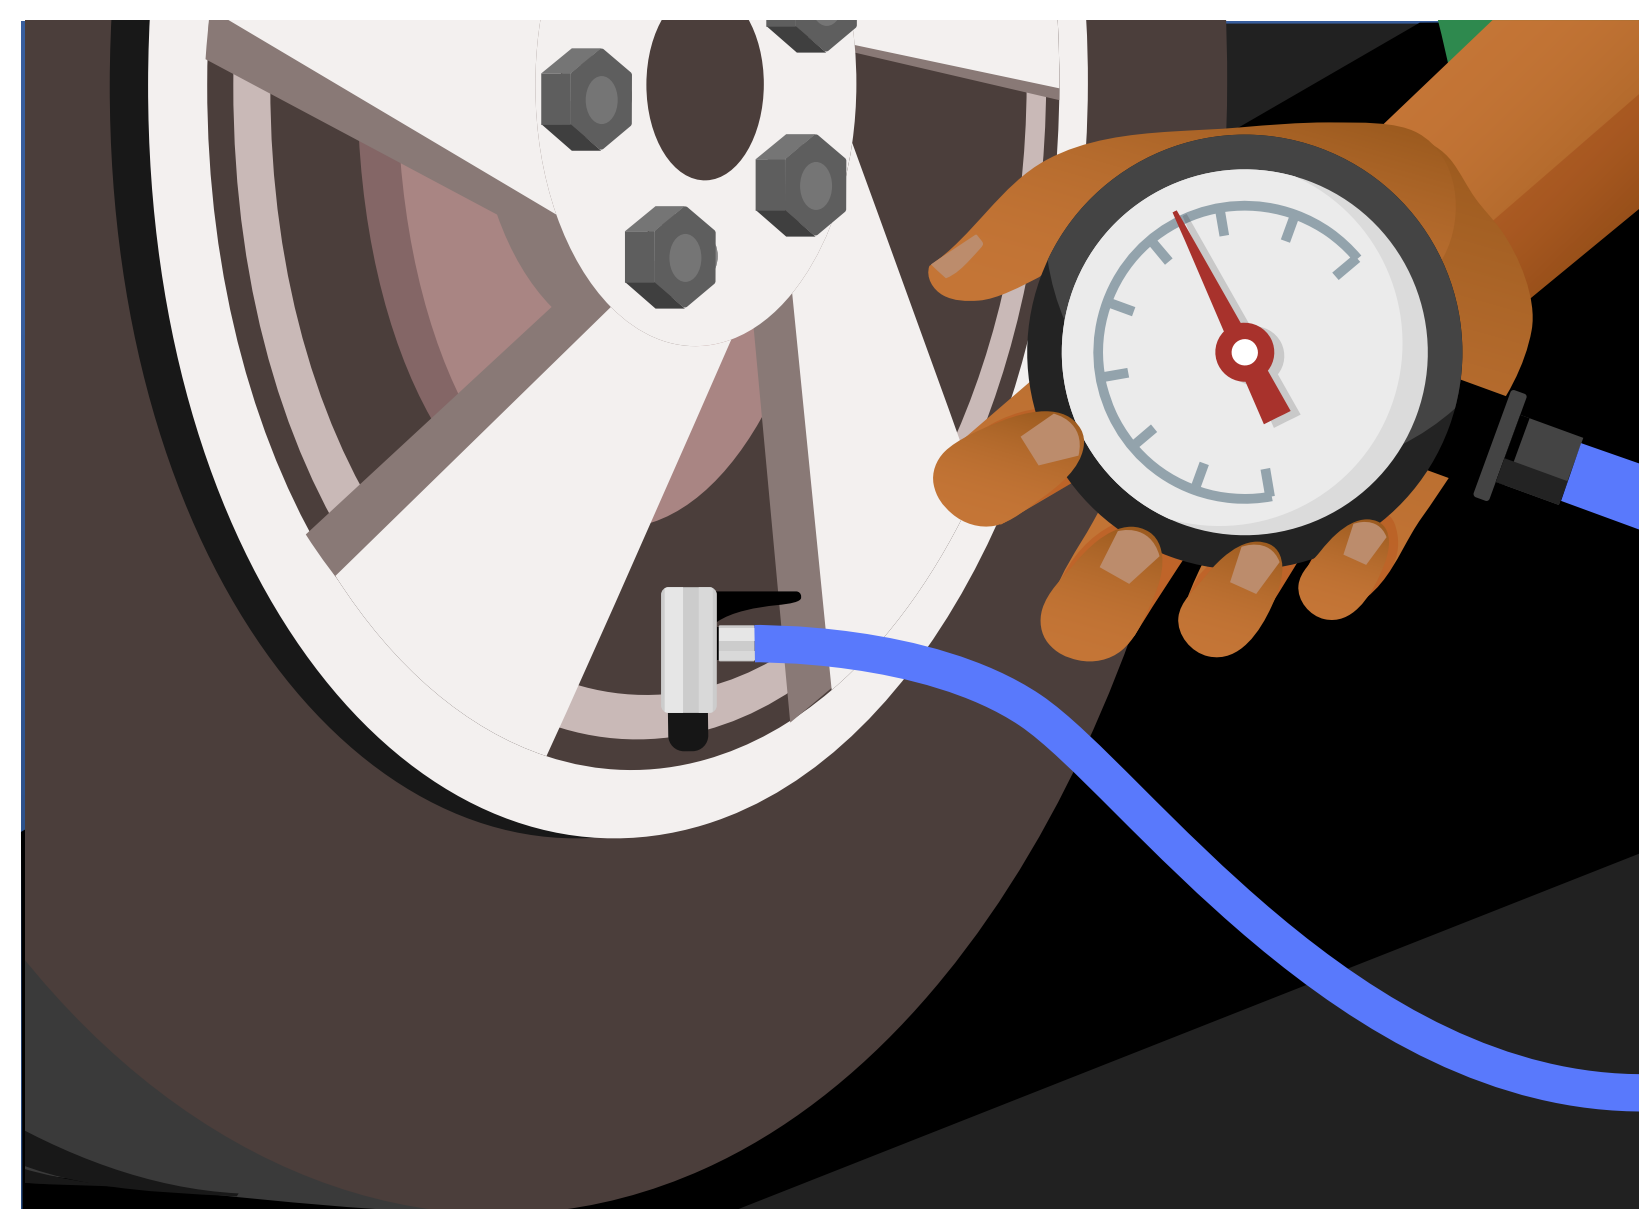

5. ATTACH THE TYRE PRESSURE GAUGE TO THE VALVE AND PRESS FIRMLY.



3. PARK YOUR CAR ON A FLAT SURFACE FOR ACCURATE READINGS.




7. INFLATE OR DEFLATE THE TYRE TO REACH THE CORRECT PRESSURE.



8. REPEAT THE PROCESS FOR ALL FOUR TYRES.



6. READ THE PRESSURE AND COMPARE IT TO THE RECOMMENDED LEVEL.

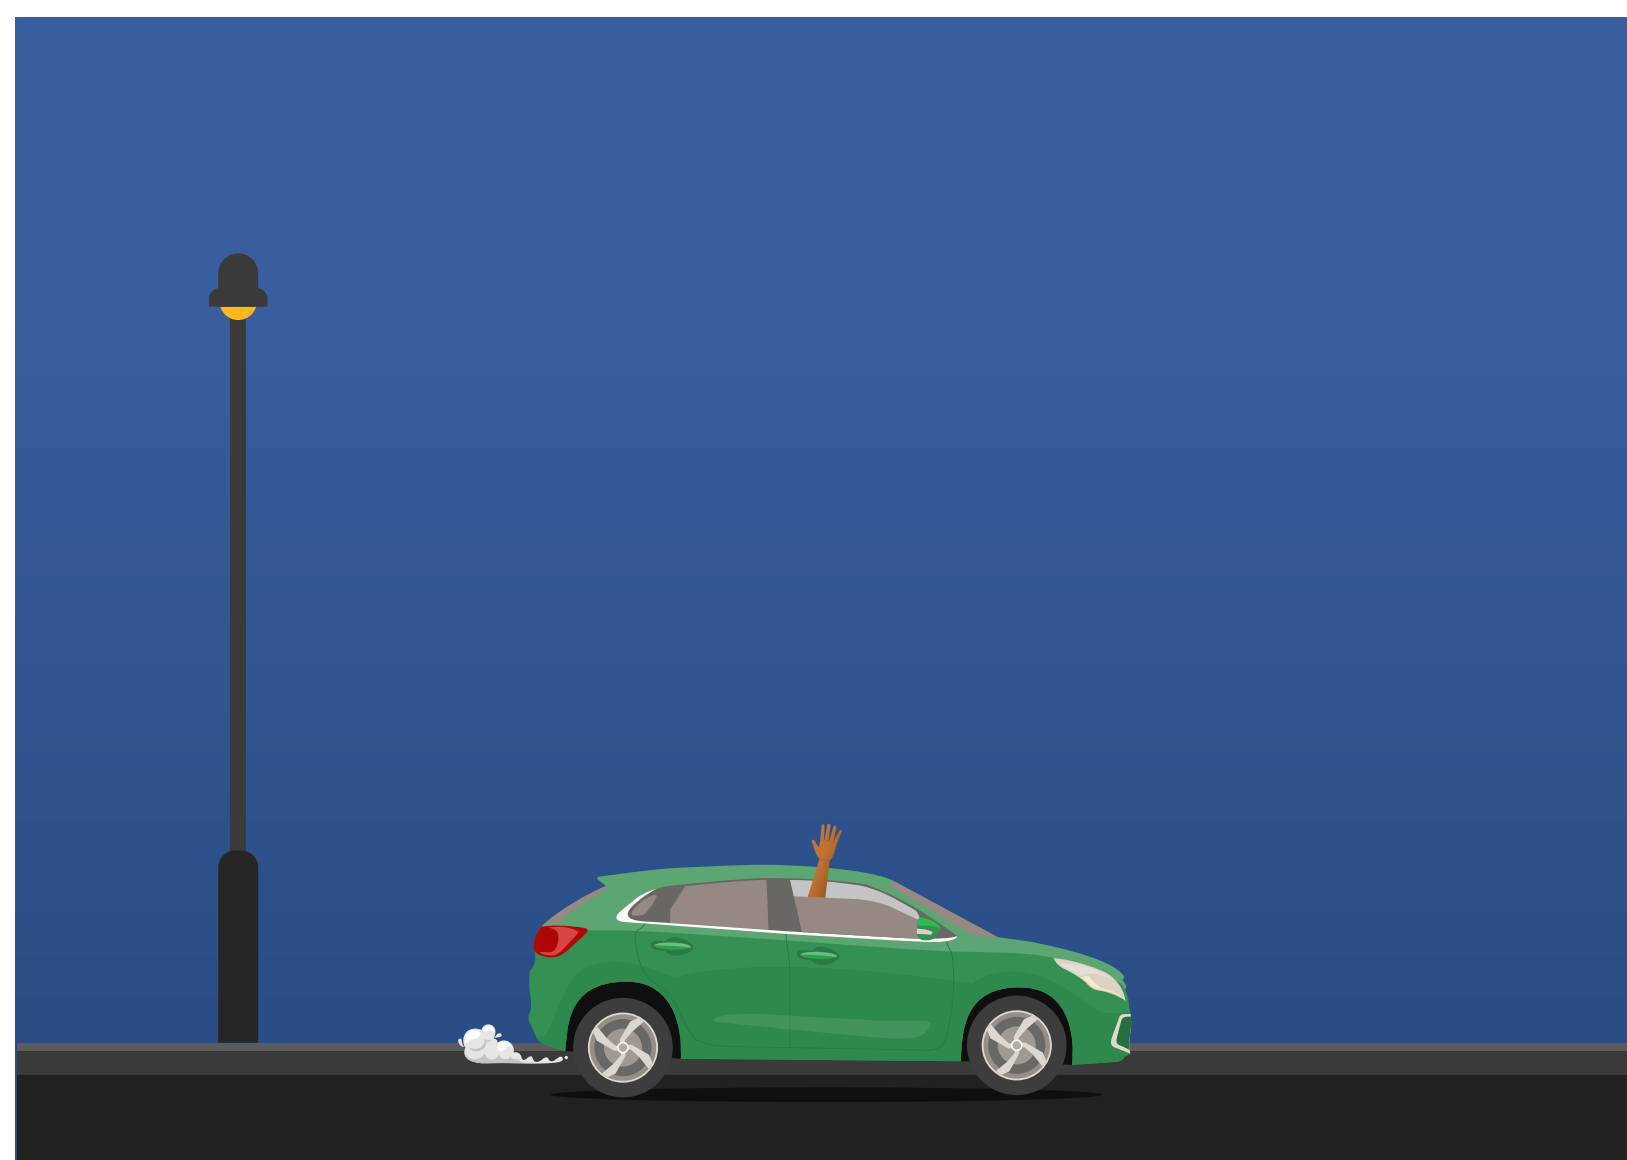

9. REATTACH THE VALVE CAPS SECURELY.



DRIVE AWAY HAPPY EVERY TIME

10. CHECK YOUR VEHICLE'S TYRE PRESSURE MONTHLY AND BEFORE LONG TRIPS TO ENSURE SAFETY.